



Discovery 1

www.cnhelicoptert.com


3 Axis Gyro Handheld Gimbal

Quick Start Manual

1



2

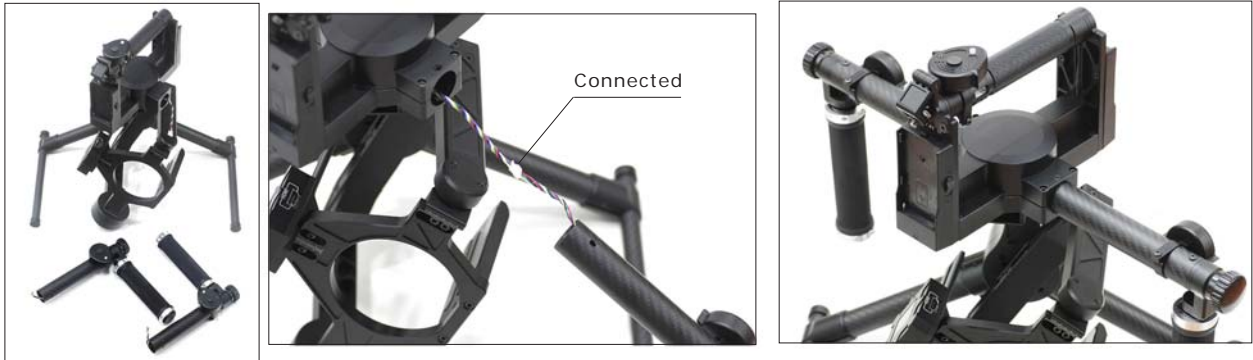

3



4





Mode 1: Full Follow (TILT and YAW follow your hands)

Mode 2: Half Follow (Only YAW follow your hands)

Mode 3: Lock (All axis locked)

You must use two batteries (NP-F550, NP-F750 or NP-F970), and confirm battery is full.

Adjust the C.G. is necessary before use.

If you have any questions or need any help please contact dealer.

If you want more information (Doc. and Video) or want to order Battery and Charger please contact dealer. www.cnchicoptert.com

DISCOVERY 1

www.cnchicoptert.com

Design group